

Mail Server Details

Main SMTP Server: mail.aapt.net.au

Login: Your Aapt Email address

Password: Your password

Port: 25

Authentication: No

Aapt requires DNS entries to be added also. These are all based on the State you are located in.

On your MFD these will generally be found under Network Settings then TCPIP


New South Wales	Victoria	
Primary DNS: 192.189.54.33	Primary DNS: 192.189.54.17	
Secondary DNS: 203.8.183.1	Secondary DNS: 203.8.183.1	
Queensland	Tasmania	
Primary DNS: 192.189.54.33	Primary DNS: 192.189.54.17	
Secondary DNS: 203.8.183.1	Secondary DNS: 203.8.183.1	
Australian Capital Territory	South Australia	
Primary DNS: 192.189.54.33	Primary DNS: 61.9.226.33	
Secondary DNS: 203.8.183.1	Secondary DNS: 61.9.194.49	
Northern Territory	Western Australia	
Primary DNS: 192.189.54.17	Primary DNS: 192.189.54.17	
Secondary DNS: 203.8.183.1	Secondary DNS: 203.8.183.1	

Creator: EID Technical Page 1 of 7 Date: 8 Mar 2020


Setup on the MFD Web Interface

Desktop Series 1

1. Input your printers TCPIP address into your web browser

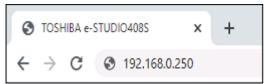

Go to Settings > Network Port > SMTP Setup

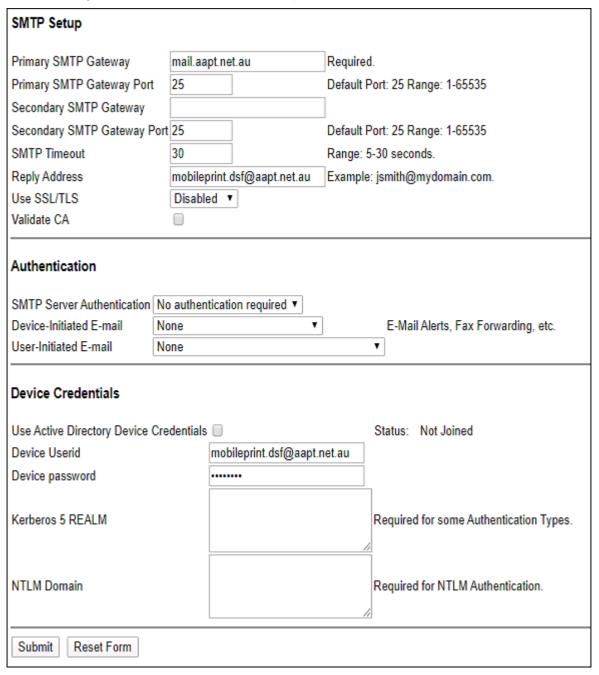

3. Input your smtp details and hit submit

Creator: EID Technical Page 2 of 7 Date: 8 Mar 2020

4. Next go to Settings > Network Port > TCPIP

DNS Server Address	192	. 189	. 54	. 33	If DHCP or BOOTP is not on the network
Backup DNS Server Address	203	. 8	. 183	. 1	

- 5. Scroll down to the DNS server address and input your DNS information
- 6. Press "Submit"


Creator: EID Technical Page 3 of 7 Date: 8 Mar 2020

Desktop Series 2

1. Input your printers TCPIP address into your web browser



2. Go to Settings > Email Setup

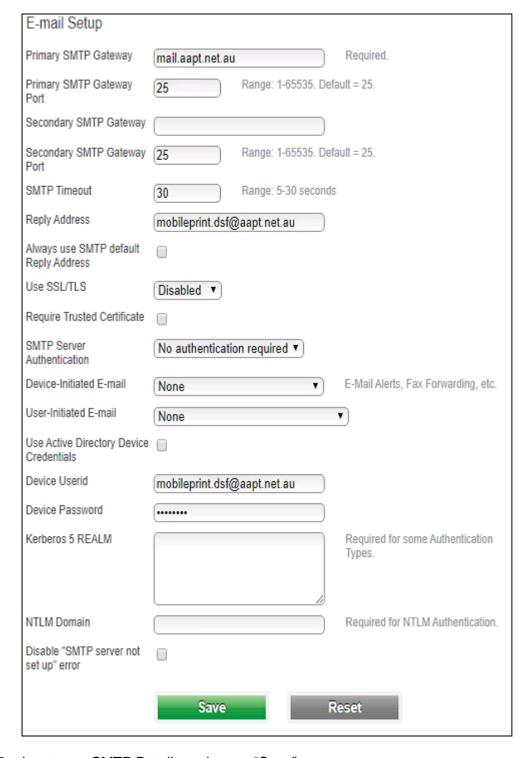

3. Input your SMTP Details and press "Save"

Creator: EID Technical Page 4 of 7 Date: 8 Mar 2020

4. Next click on Network Ports > TCPIP


DNS Server Address	192.189.54.33	If DHCP or BOOTP is not on the network
Backup DNS Server Address	203.8.183.1	

5. Input DNS entries then press "Save"

Creator: EID Technical Page 5 of 7 Date: 8 Mar 2020

EBN and EBX using TopAccess

1. Input your printers TCPIP address into your web browser

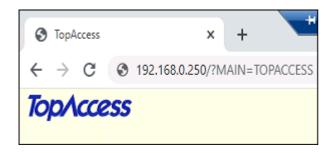

- 1. Login with User name (admin) and Password (123456)
- 2. Then click on Administration > Network > SMTP Client




- 3. Input your SMTP details.
- 4. Press "Save"
- 5. Click on "Network"



6. Click on "DNS"

7. Input your DNS entries

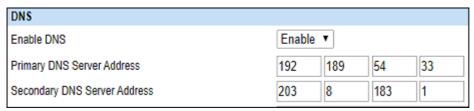

- 8. Scroll to the bottom and press "Save"
- 9. You also need to set a valid send from address, go to Administration > Setup > Email



- 10. Input a valid email account here.
- 11. Press "Save"