

PRINTING A BANNER

Banner Print Driver Setup for Microsoft Windows



Scope of Disclosure	Public
Classification	Standard
Handling	Do not copy or transfer
Document Type	Guide



Device List

e-BRIDGE Next Series III

Colour

- e-STUDIO2020AC / e-STUDIO2021AC*
- e-STUDIO2525AC / 3025AC / 3525AC / 4525AC / 5025AC / 6525AC
- e-STUDIO5516AC / 6516AC / 7516AC

Monochrome

- e-STUDIO2528A / 5528A / 6528A
- e-STUDIO7529A / 9029A

e-BRIDGE Next Series II

Colour

- e-STUDIO2010AC *
- e-STUDIO2515AC / 3015AC / 3515AC / 4515AC / 5015AC
- e-STUDIO5516AC / 6516AC / 7516AC
- e-STUDIO400AC / 330AC

Monochrome

- e-STUDIO2518A
- e-STUDIO5518A / 7518A / 8518A

e-BRIDGE Next Series I

Colour

- e-STUDIO2000AC *
- e-STUDIO2505AC / 3005AC / 3505AC / 4505AC / 5005AC
- e-STUDIO5506AC / 6506AC / 7506AC

Monochrome

- e-STUDIO2508A / 3508A / 4508A
- e-STUDIO5508A / 7508A / 8508A
- e-STUDIO3508LP / 4508LP

*Extra memory will be required on these models



Procedure

1. Open PowerPoint and go to the menu "Design and choose Slide Size". Then select "Custom Slide Size". We have used 305x1200 mm which is the maximum size allowable for a banner page using a Toshiba MFD.

Slide Size	? ×
Slides sized for: Custom Width: 120 cm Height: 30.5 cm Number slides from: 1	Orientation Slides Orientation Slides Orientation Orientation Orientation Orientation Orientatio Or

2. This will give you a banner size page (PowerPoint page representation shown below). Insert the banner image you want to print



TOSHIBA

3. Next open the printer driver and go to "preferences" and "others". Then select "Custom Paper Size"

🚔 TOSHIBA Universal Printer (60) Printing Preferences X			
Basic Finishing Paper Handling I	mage Quality Effect e-BRIDGE JobSplitter e	X Others Templates	
Print Job:	Default Menu Setting: Basic ~	<u>> TopAccess</u>	
	Do not Print Blank Pages Off On (Fo	ad Print Mode or 2-Sided printing only) or all printing)	
	SNMP Communication	SNMP Settings	
	Output Devices	Add Printer	
100%			
Letter	Custom Paper Size		
1.2.3	User name (Alias): JMcQue		
Settings	Department Code:		
Profile:	✓ Hide Department Code(Z)		
None ~	Project Code(K):		
Save Profile Delete Rules Based Printing	Custom Settings File: Impo	ort Export	
Restore Defaults	Restore All Defaults	Version Information	
	OK Canc		

4. In the "Custom Paper Size" setup, add the banner dimensions show below. Then click OK

🟚 TOSHIBA Universal (50) Printing Preferences	Custom Paper Size X
Custom Paper Size		Name:
Paper Size List:		Banner
Name C4 C5 Banner	Size 229.0 x 324.0 mm 162.0 x 229.0 mm 305.0 x 1200.0 mm	A(Length): 305.0 • nm (100.0 - 305.0) B(Width): 1200.0 • nm (148.0 - 1200.0) inch • mm
Add	Delete	r Size Que

TOSHIBA

Go to "File" and "Printing Preferences". Under the "Basic" tab choose the banner size paper you have created.
 If you are printing on Aqua Ace Banner Paper you need to use Special 1 (as this is a coated, waterproof stock).
 Any other Banner Media should be setup with regards to its GSM weight.

Basic	SHIBA Univ Finishing	rersal (50) Printin Paper Handling		>
Print Jo	ob: Normal Pri	nt ~	Original Paper Size: Banner (305.0 x 1200.0mm) Print Paper Size: Banner (305.0 x 1200.0mm) 100 \$%(25-400)	
			Paper Source: Bypass Tray ~ Paper Type: Special 1 ~	
Cu	0% stom 2.3 - 1.2.3	Custom 3	Destination: Tray 1 ~ A4-R A3 A4	

6. Then hit "Print". The printer will ask you to load the size you have just created into the manual feed tray

Job Status		k	\oplus	?
Select the drawer or bypass tray. Press START button.		: 305x1200	205	
Press STAILT BULLON.)		305x1200	
A4-R 🐮 🔄 Bypass Feed 🕨				
A3 🕒				
A4 🗏 🖃				
			Close	
Jobs Log	Supply	Toner		
Check the machine status		05/08/2019 10:25	Job Status	5 🕨

7. Load your paper into the Bypass Tray and carefully assist feeding of the banner though the Toshiba MFD

NOTE: A PowerPoint slide in banner size can be downloaded from our FAQ also.