

Scope of Disclosure	Corporate Use only
Classification	Standard
Handling	Do not copy or transfer
Document Type	How To

Manual Print Driver Installation on Windows 7 For e-Studio eBX Using 'Add a Printer' Wizard Method

1. Download the print driver for your printer from the Toshiba web site <u>www.eid.toshiba.com.au</u>. Once the driver has been downloaded & saved, you'll need to extract the driver file.

2. Click the "Start" button then select "Devices & Printers".



3. Click on "Add a printer".





4. Click on "Add a local printer".

0) 🖶 Add Printer	
	What type of printer do you want to install?	
	 Add a local printer Use this option only if you don't have a USB printer. (Windows automatically installs USB printers when you plug them in.) Add a network, wireless or Bluetooth printer Make sure that your computer is connected to the network, or that your Bluetooth or wireless printer is turned on. 	
	Next Cancel	

5. Select the "Create a new port" radio button then for "Type of port" select the drop down arrow & click on "Standard TCP/IP Port" then click on the "Next" button.

	×
🚱 🖶 Add Printer	
Choose a printer port	
A printer port is a type of con	nection that allows your computer to exchange information with a printer.
Use an existing port:	LPT1: (Printer Port) *
Oreate a new port:	
Type of port:	Local Port 🔹
	Local Port
	Toshiba Bluetooth Monitor
	Next Cancel

6. In the "Host name or IP address" field, type in the IP address of your Toshiba device then click on the "Next button.

Type a printer hostname or IP address			
Device type:	TCP/IP Device		
Hostname or IP address:	10.61.30.42		
Port name:	10.61.30.42		





7. Click on the "Have Disk" button.

🚱 👼 Add Printer	last a local sector a fight from the sec	<u> </u>
Install the printer dri	ver ter from the list. Click Windows Update to see more models.	
Manufacturer	Printers	-
Brother Canon Epson Fuji Xerox	Brother DCP-116C Brother DCP-117C Brother DCP-128C Brother DCP-128C Develop DCP-129C	-
This driver is digitally <u>Tell me why driver sig</u>	signed. Windows Update Have Dist	κ
	Next	Cancel

8. Click on the "Browse" button.

Install Fro	m Disk	×
4	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from: ▲	<u>B</u> rowse

9. Browse to the extracted driver files directory then click on the "Open" button.







10. Click on the "OK" button.

🕞 🖶 Add Printer	Iline	X
Install the print	er driver	
Install Fre	om Disk	1
Manufa Brother Canon	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below. Cancel	Â
Epson	Copy manufacturer's files from:	
Fuji Xen	C:\Users\eidhelpdesk\Desktop\eBX_WIN_64_UN Browse	-
This anser and Tell me why de	igrany signed.	e Disk
	Next	Cancel

11. Select the Toshiba print driver & click on the "Next" button.

🕒 🖨	Add Printer
Ins	tall the printer driver Choose your printer from the list. Click Windows Update to see more models. To install the driver from an installation CD, click Have Disk.
Pri	inters ITOSHIBA Universal Printer 2
Ţ	This driver is digitally signed. Windows Update Have Disk Tell me why driver signing is important
	Next Cancel

12. In this window you have the option of changing the printer name. Once completed click on the "Next" button.





13. Click on the "Next" button.

Printer Sh	aring			
If you want to type a new or	share this printer, you mu ne. The share name will be	st provide a share nar visible to other netwo	ne. You can use the sug rk users.	gested name o
Do not sha	re this printer			
Share this	printer so that others on yo	ur network can find a	ind use it	
S <u>h</u> are r	name:			
Locatio	in:			
<u>C</u> omm	ent:			

14. Click on the "Finish" button.

🕙 🚓 Add Printer
You've successfully added TOSHIBA Universal Printer 2
Set as the default printer You can choose a default printer for home, work, and other places you go. <u>Set up multiple</u> <u>default printers</u>
To check if your printer is working properly, or to see troubleshooting information for the printer, print a test page.
Print a test page

15. Within Devices & Printers right click on the created Toshiba printer icon then left click on "**Printer** properties".





16. Select the "Ports" tab.

	al Sharing	Ports	dvanced	Color Management	Security	
-	TOS	HIBA Univ	ersal Print	er 2		
_						
Prin	t to the foll	owing por	t(s). Docu	ments will print to	the first free	
Po	rt	Desc	ription	Printer		
m	COM4:	Seria	Port			
	COM6:	Seria	Port			in the
	COM7:	Seria	Port			E
	FILE:	Print	to File			
V	10.61.30.42	Stan	dard TCP/	IP Port TOSHII	BA Universal Printer 2	
	XPSPort:	Loca	I Port	Micros	oft XPS Document W	÷
•				11	•	
	Add Por	t	D	elete Port	Configure Port	
					-	_
- E	nable bidire	ectional su	pport			
🗐 E	nable printe	er pooling				
E E	nable bidire nable printe	ectional su er pooling	ipport			

17. Click on the "Configure Port" button.

e TOSHBA Universal Printer 2 Properties Security General Shanog Port Advanced Color Management Security TOSHBA Universal Printer 2 Print to the following port(s), Documents will print to the first free checked port.						
Port COM4: COM6: COM6: COM7: FILE: V 10.61.30.42 XPSPort:	Description Serial Port Serial Port Serial Port Print to File Standard TCP/IP Po Local Port	Printer Ort TOSHIBA Universal Printer 2, Microsoft XPS Document Wr,				
Add Port Configure Port						
		OK Cancel Apply				

18. Under protocol select "LPR" then within the LPR Setting Queue Name, type in lowercase "print". Make sure that the 'LPR Byte Counting Enabled' box is unchecked. Click on the "OK" button.

Configure Standard TCP/IP Port	Monitor	×
Port Settings		
Port Name:	10.61.24	0.80
Printer Name or IP Address	10.61.24	0.80
Protocol		e LPR
Raw Settings Port Number:	9100	
LPR Settings Queue Name:	print	
LPR Byte Counting En	abled	
SNMP Status Enabled		
Community Name:	public	
SNMP Device Index:	1	
		OK Cancel





19. Select the "Device Settings" tab.

	HIBA Universal f	Printer 2	Unity Device 3	eungs	
Location:					
Model: TOSH	IIBA Universal P	rinter 2			
Features Color: Ves		Paper available:			
Double-sided: Yes Staple: Yes		A4 A3		*	
Speed: 55 ppm Maximum resolut	ion: 600 dpi			w	
	Pre	eferences	Print Test Page	•	

20. Confirm the machine options & paper sizes are correct. If so then click on the "Apply" button.

eneral Sharing Ports Advanced	Color Management Security Device Settings
siteral shalling roks Advanced	Color Management Security
	Model Selection:
	e-STUDIO5540C 👻
—	Option Drawers:
	Drawer 1,2 & LCF 🔹
	Finisher
A4-K A3	Saddle Stitch Finisher (2 Tray & Tray 1 fix)
A4	Hole Punch Unit:
	None
	External LCF:
	None
	Inserter Unit
Device Settings Retrieval	Automatic Duplexing Unit
Device Settings Kettlevar	Hard Disk
Update Automatically	Drawer Settings Account Settings
Update Now	Customisation
Restore Defaults	Version Information
	OK Cancel Apply Help

21. Select the General tab then click on the "Print Test Page" button to confirm printing operation.

ieneral Sha	ring Ports Ad	vanced Color Manager	nent Security Devi	ce Settings	
	TOSHIBA U	niversal Printer 2			
Location:					
Comment:					
Model:	TOSHIBA U	niversal Printer 2			
Features					
Color: Ye	5	Paper ava	ilable:		
Double-s Staple: Y	iided: Yes es	A4 A3		^	
Speed: 5	ō ppm				
Maximur	m resolution: 60) dpi		*	
		Preferences	Print Test F	age	

