



Mail Server Details

Main SMTP Server: smtp.gmail.com

Login: Your Gmail address

Password: Your password

Port: 587

Authentication: Yes

Method: STARTTLS – SSL/TLS

Gmail requires DNS entries to be added also. This is a single DNS entry


On your MFD these will generally be found under Network Settings then TCPIP

Gmail DNS Entry
Primary DNS: 8.8.8.8

Setup on the MFD Web Interface

Desktop Series 1

1. Input your printers TCPIP address into your web browser

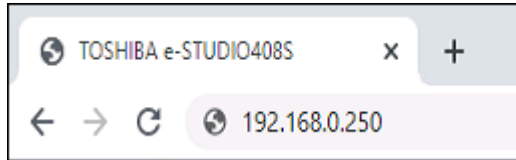

2. Go to Settings > Network Port > SMTP Setup

SMTP Setup

Primary SMTP Gateway	<input type="text" value="smtp.gmail.com"/>	Required.
Primary SMTP Gateway Port	<input type="text" value="587"/>	Default Port: 25 Range: 1-65535
Secondary SMTP Gateway	<input type="text"/>	
Secondary SMTP Gateway Port	<input type="text" value="25"/>	Default Port: 25 Range: 1-65535
SMTP Timeout	<input type="text" value="30"/>	Range: 5-30 seconds.
Reply Address	<input type="text" value="mobileprint.dsf@gmail.com"/>	Example: jsmith@mydomain.com.
Use SSL/TLS	<input type="text" value="Required"/>	
Validate CA	<input type="checkbox"/>	

Authentication

SMTP Server Authentication	<input type="text" value="Login / Plain"/>	
Device-Initiated E-mail	<input type="text" value="Use Device SMTP Credentials"/>	E-Mail Alerts, Fax Forwarding, etc.
User-Initiated E-mail	<input type="text" value="Use Device SMTP Credentials"/>	

Device Credentials

Use Active Directory Device Credentials	<input type="checkbox"/>	Status: Not Joined
Device Userid	<input type="text" value="mobileprint.dsf@gmail.com"/>	
Device password	<input type="password" value="....."/>	
Kerberos 5 REALM	<input type="text"/>	Required for some Authentication Types.
NTLM Domain	<input type="text"/>	Required for NTLM Authentication.


3. Input your smtp details and hit submit
4. Next go to Settings > Network Port > TCPIP

DNS Server Address	<input type="text" value="8"/>	.	<input type="text" value="8"/>	.	<input type="text" value="8"/>	.	<input type="text" value="8"/>	If DHCP or BOOTP is not on the network
Backup DNS Server Address	<input type="text" value="192"/>	.	<input type="text" value="168"/>	.	<input type="text" value="0"/>	.	<input type="text" value="1"/>	
Backup DNS Server Address 2	<input type="text" value="208"/>	.	<input type="text" value="67"/>	.	<input type="text" value="220"/>	.	<input type="text" value="220"/>	
Backup DNS Server Address 3	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>	

5. Scroll down to the DNS server address and input your DNS information
6. Press "Submit"

Desktop Series 2

1. Input your printers TCPIP address into your web browser

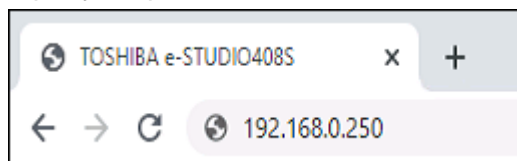

2. Go to Settings > Email Setup

E-mail Setup

Primary SMTP Gateway

Required.

Primary SMTP Gateway Port

Range: 1-65535. Default = 25.

Secondary SMTP Gateway

Secondary SMTP Gateway Port

Range: 1-65535. Default = 25.

SMTP Timeout

Range: 5-30 seconds

Reply Address

Always use SMTP default Reply Address

☐

Use SSL/TLS

Require Trusted Certificate

☐

SMTP Server Authentication

Device-Initiated E-mail

E-Mail Alerts, Fax Forwarding, etc.

User-Initiated E-mail

Use Active Directory Device Credentials

☐

Device Userid

Device Password

Kerberos 5 REALM

Required for some Authentication Types.

NTLM Domain

Required for NTLM Authentication.

Disable "SMTP server not set up" error

☒

3. Input your SMTP Details and press "Save"

4. Next click on Network Ports > TCP/IP


⌵ TCP/IP

Set Hostname	<input type="text" value="ET0021B707D63A"/>	Example: 'BOBS-PRINTER' (US-ASCII, alphanumeric characters and hyphen only)
Domain Name	<input type="text" value="DSF.local"/>	test.company.com
Allow DHCP/BOOTP to update NTP server	<input checked="" type="checkbox"/>	
Zero Configuration Name	<input type="text" value="TOSHIBA e-STUDIO408S"/>	Example: Ben's Office Printer
Enable Auto IP	<input checked="" type="checkbox"/>	
DNS Server Address	<input type="text" value="8.8.8.8"/>	If DHCP or BOOTP is not on the network
Backup DNS Server Address	<input type="text" value="192.168.0.1"/>	

5. Input DNS entries then press "Save"

EBN and EBX using TopAccess

1. Input your printers TCPIP address into your web browser

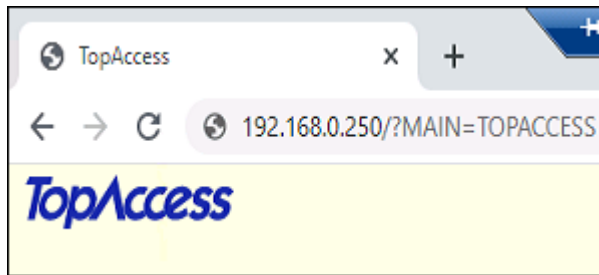

1. Login with User name (admin) and Password (123456)
2. Then click on Administration > Network > SMTP Client

SMTP Client

Save Cancel

Connection Test Execute

Enable SMTP Client Enable ▾

Enable SSL/TLS Accept all certificates without CA ▾

SSL/TLS STARTTLS ▾

SMTP Server Address smtp.gmail.com

POP Before SMTP Disable ▾

Authentication AUTO ▾

Login Name mobileprint.dsrf@gmail.com

Password

Maximum Email / InternetFax Size(2-100) 30 MB

Port Number 587

SMTP Client Connection Timeout(1-180) 30 Seconds

3. Input your SMTP details.
4. Press "Save"
5. Click on "Network"

Basic Setting

Save Cancel

[General Setting](#) [IPv4](#) [IPv6](#) [DNS](#) [DDNS](#) [LLMNR](#)

6. Click on "DNS"

7. Input your DNS entries

DNS				
Enable DNS	Enable ▼			
Primary DNS Server Address	8	8	8	8
Secondary DNS Server Address	192	168	0	1

8. Scroll to the bottom and press “Save”

9. You also need to set a valid send from address, go to Administration > Setup > Email

General Setting	
From Address	mobileprint.dsf@gmail.com
From Name	es5015AC

10. Input a valid email account here.

11. Press “Save”